


DISCO BALL LIGHT MANUAL

Thank you for your purchasing of our stage lighting series products, please read this manual before use, the manual contains important safety recommendations information and user instructions, please strictly according to regulations in order to avoid misuse and personal safety or damage to light. When receive the product, please be careful, check whether the product is damage because in transport, check the panel icon logo.

1. Function key
2. Numeric key "+"
3. Numeric key "-"
4. Memory button
5. Display screens
6. Microphone

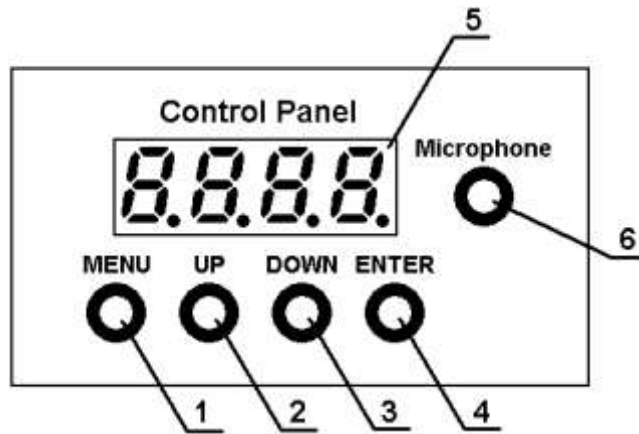

Instructions

Key Number	Mode
510 ; 520	Sound control
R • • 1	DMX512
R1 1	Red color
R2 1	Green color
R3 1	Blue color
R4 1	Gradual change
R5 1	Jump change
R6 1	Slow change
R7 1	Strobe

Announcements

1. please strictly according to regulations, Do not arbitrarily unloading the light.
2. This product is intended for indoor use only, and to ensure waterproof, moisture, shock, do not use in dusty environments.
3. Prevent foreign objects into the body, so as not to cause a malfunction.
4. Don't frequent switch the machine, easy cause damage.

Warning

1. The lamps support 110 V - 240 V / 50 - 60 Hz power supply, if over this range, the proposed use of the voltage stabilizing equipment, otherwise will seriously affect the light life.
2. This product are strictly quality tested before they go out. All users should strictly refer to the instruction manual, any of the damage because of misuse is not included by the company warranty, any problem because of ignore operation manual is also not dealers responsible for, within the scope of the operation of the lamps and lanterns of produce any damage to the human body, the company shall not be responsible.